

## DLR56 Installation Tips for New Construction and Remodel Housings

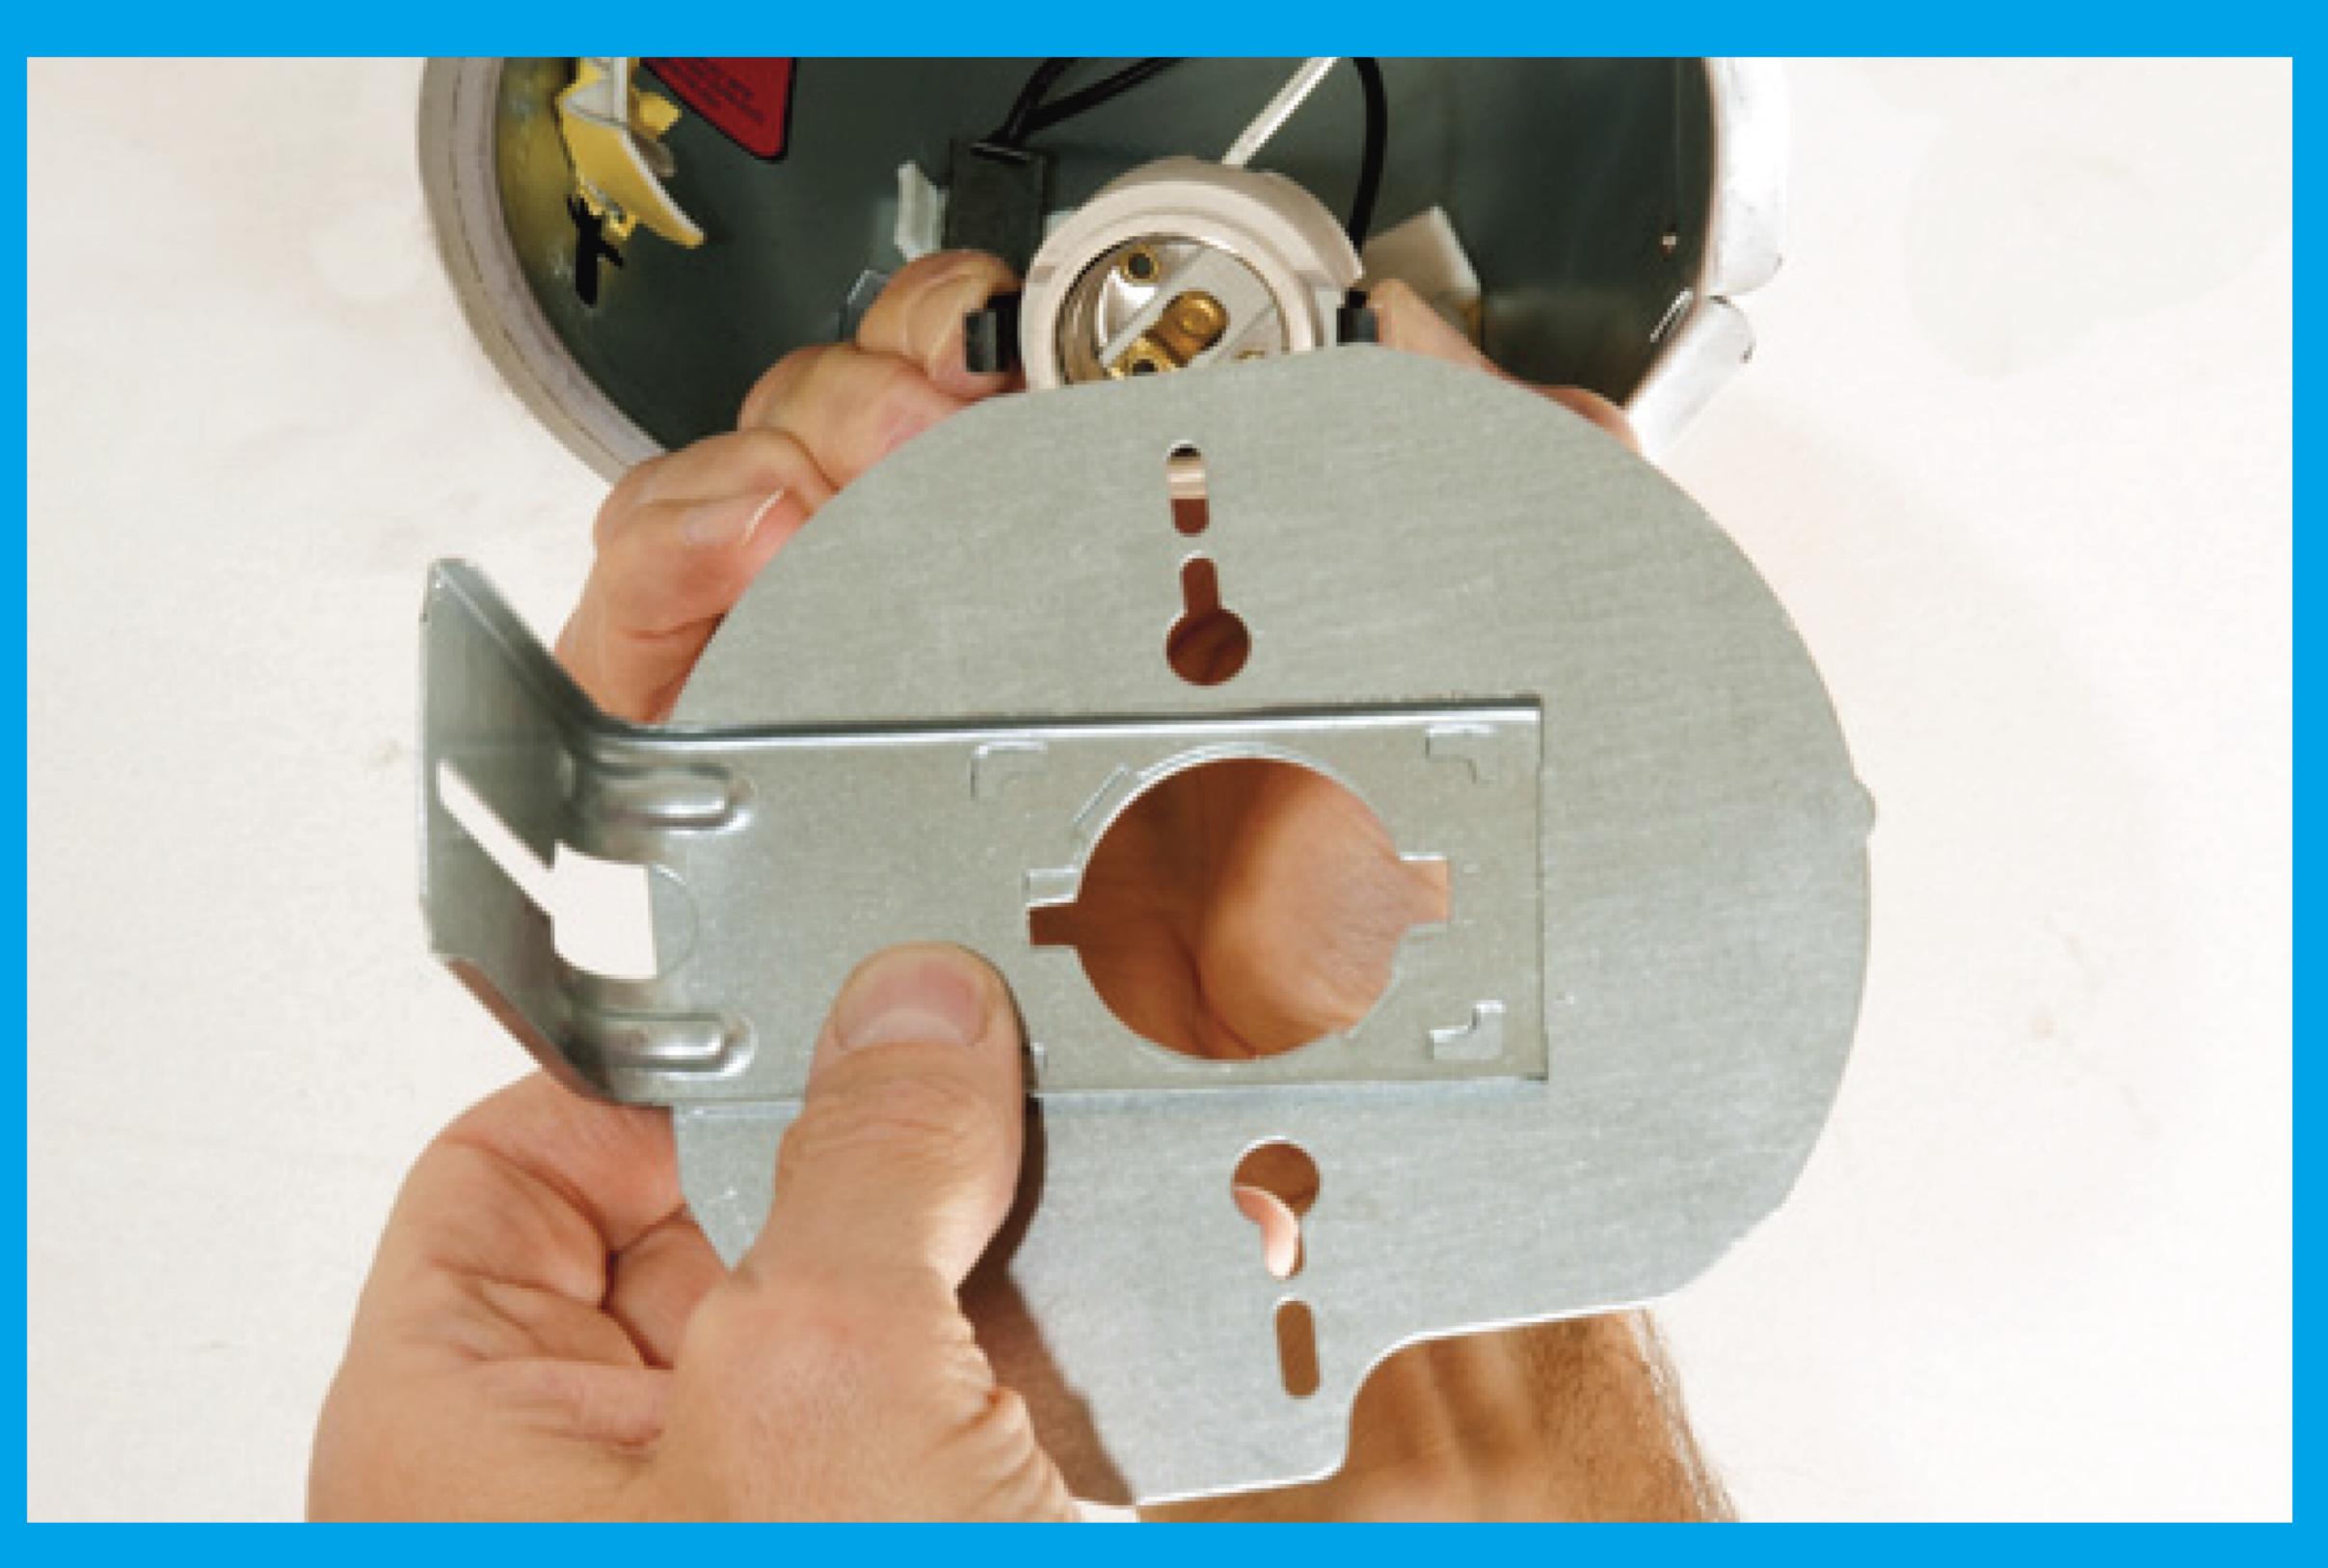

1. Remove and discard the mounting bracket/plate from inside the housing. Place the "Modified Fixture" sticker on the inside of the housing.



2. Screw in the Edison connector to the Edison base inside the housing. A GU-24 adapter is also available for housings with a GU-24 base.

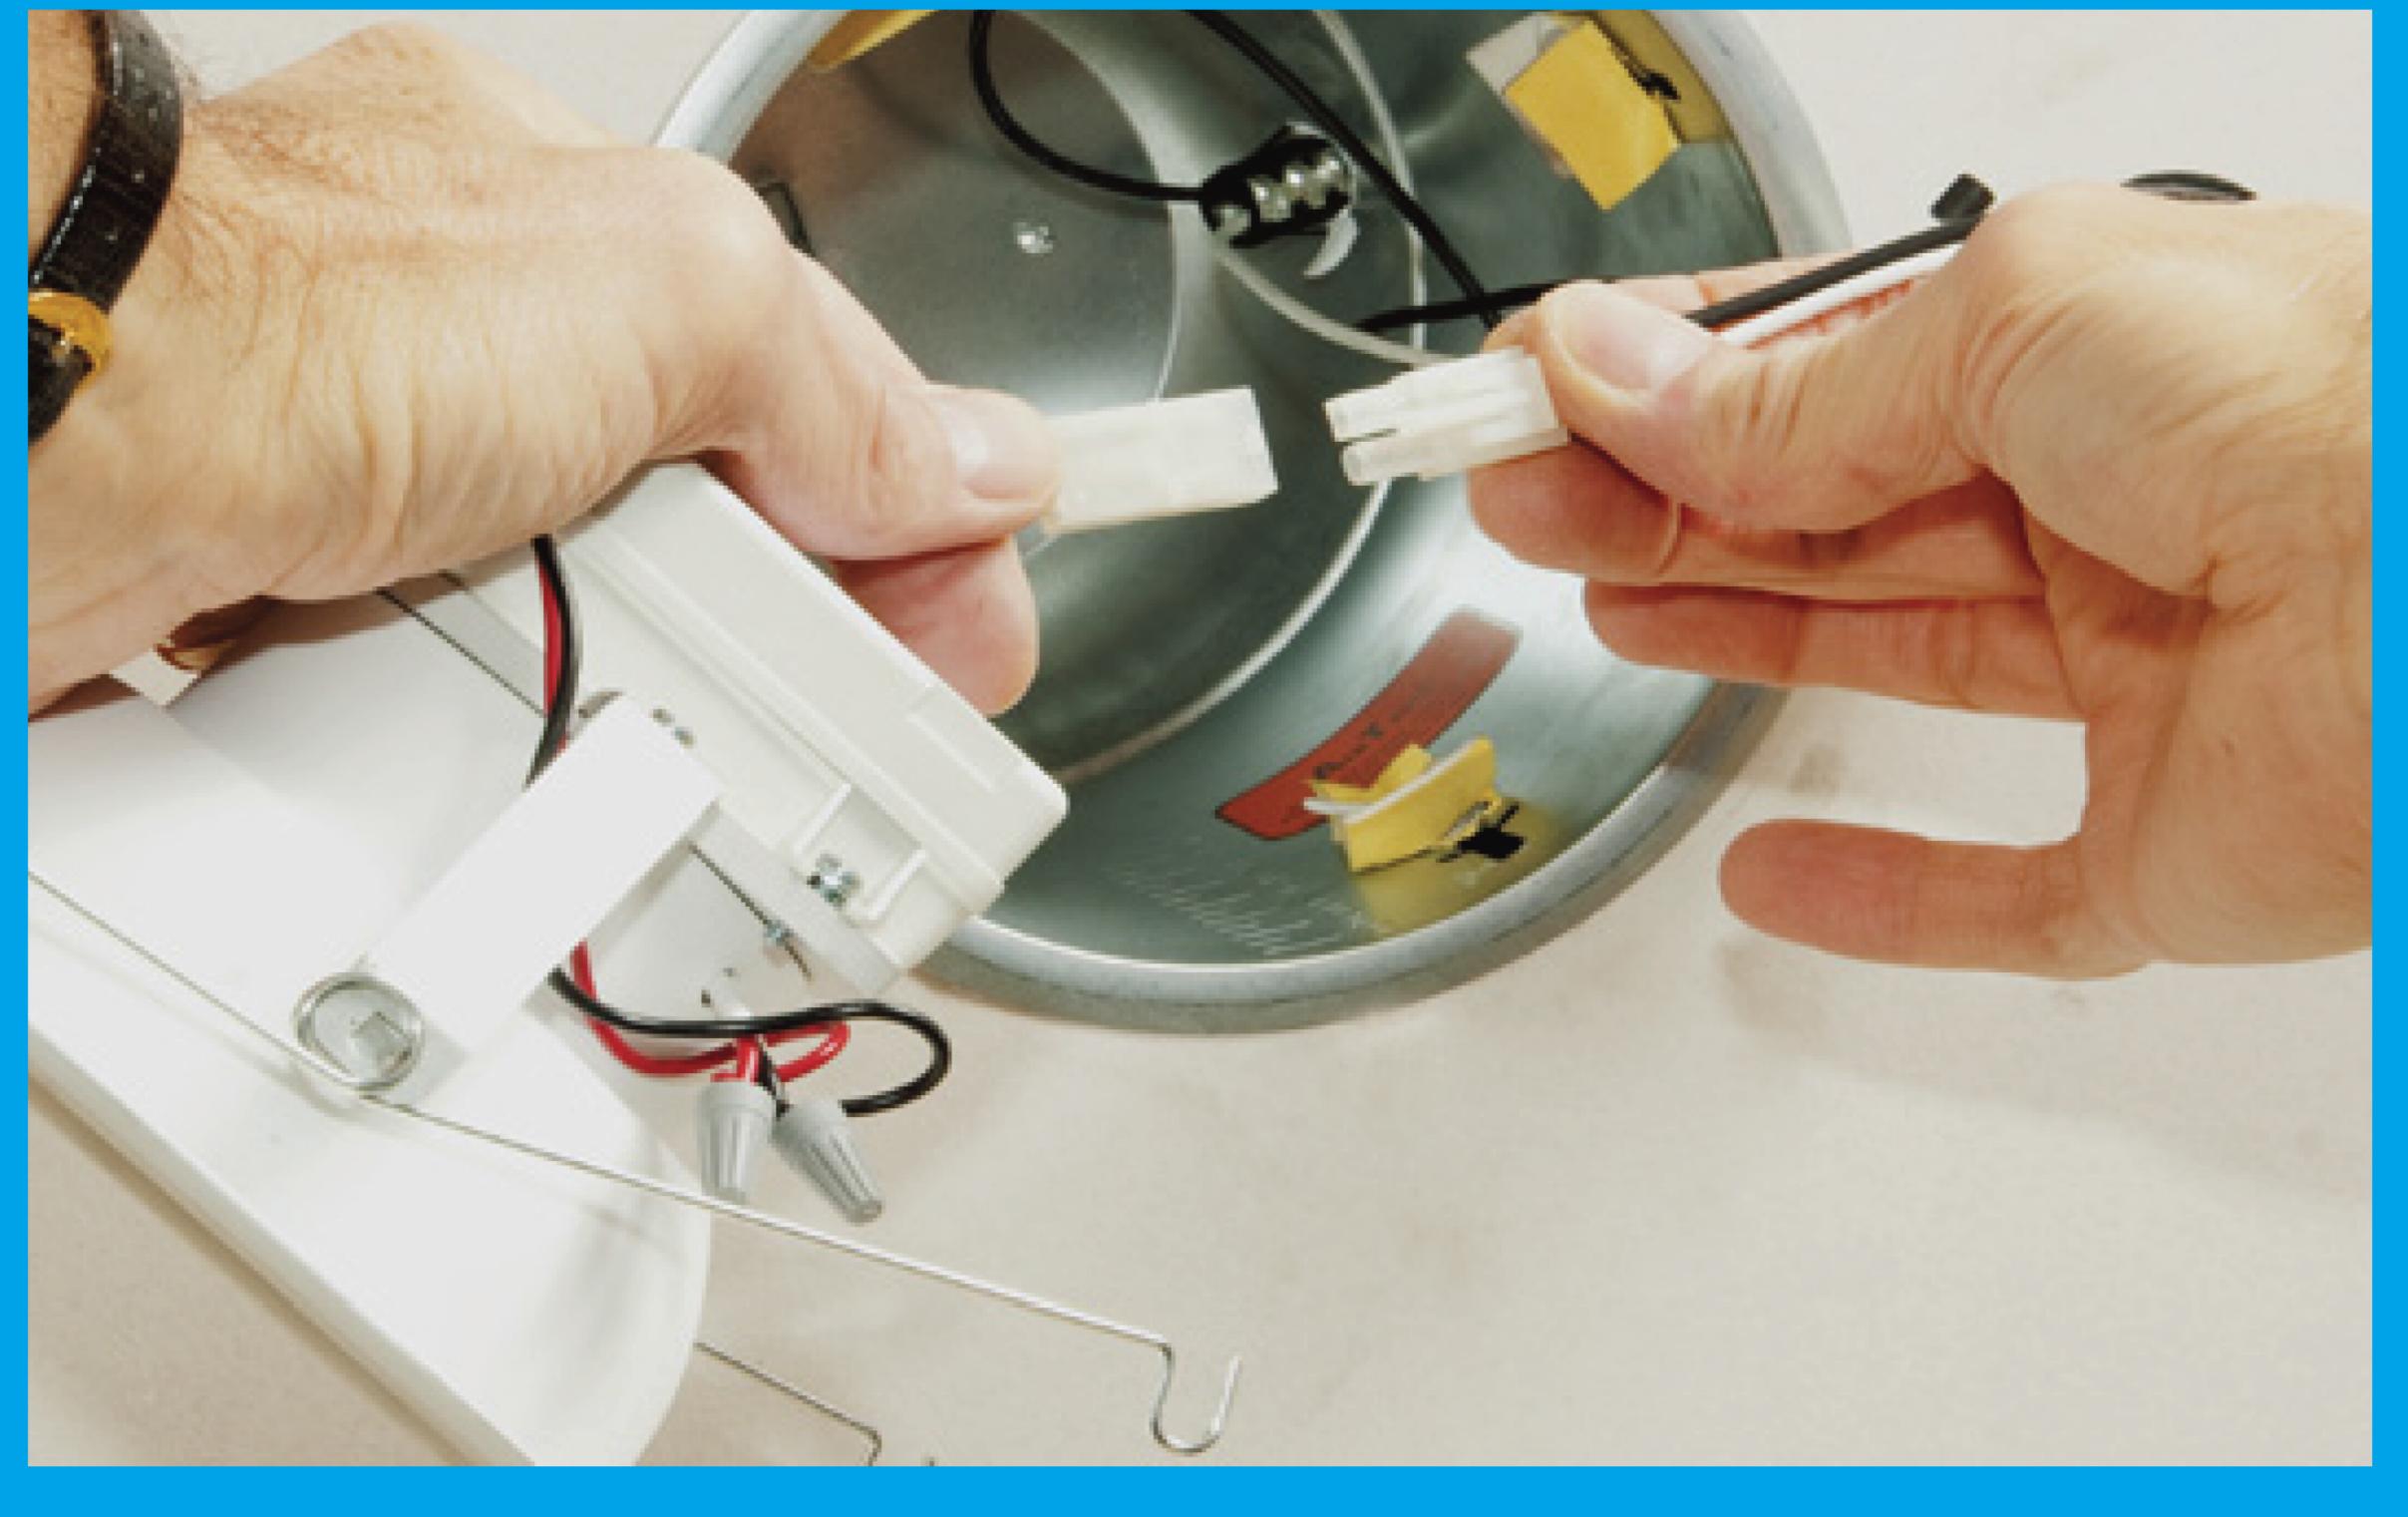

3. Connect the IDEAL or MOLEX adapter to the DLR56.



4. Using both hands, squeeze the torsion springs (or v-springs) together while inserting the DLR56 into the housing. Release the springs, allowing them to catch the mounting clips within the housing. Push the DLR56 into the housing and flush with the ceiling.